



Disassembling Polaroid a520 Logic Board

Taking off the logic board to get to the lens

Written By: Dani





TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Disassembling Polaroid a520 Battery



- Locate the battery cover on the bottom of the camera.

Step 2



- Place your thumb on the battery cover and push towards the arrow. The cover will release and pop open.

Step 3



- Remove the batteries from the camera.

Step 4 — Disassembling Polaroid a520 Casing



- Unscrew and remove four (3mm) screws on the right side of the camera. This will release the front and back casings.

Step 5



 
- Use your nail or a flat object to pry up the edge of the front casing. Push the casing up and back.
- Repeat this step for the back casing.

Step 6 — Disassembling Polaroid a520 LCD Screen



- Locate the black plastic strip under the screen above the white plastic strip.

Step 7

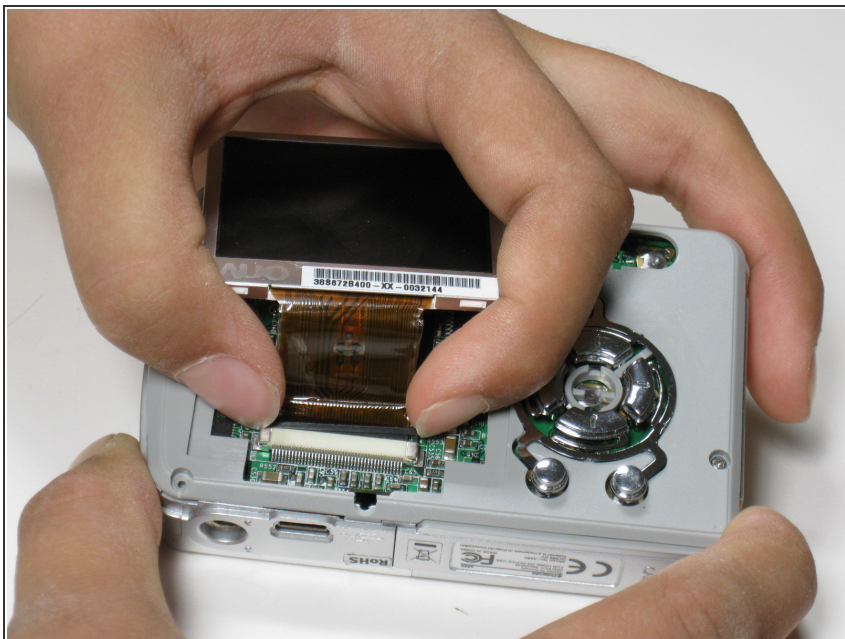

- Pull up both sides of the black piece up about a mm.

⚠ The black plastic piece is not meant to come all the way off, just enough to release the screen.

- Once the piece is lifted carefully slide the screen out of the slot.

Step 8 — Logic Board



 
- Unscrew and remove the four (6 mm) screws on the inside casing.

Step 9




- Pull the inner casing off of the camera.

Step 10

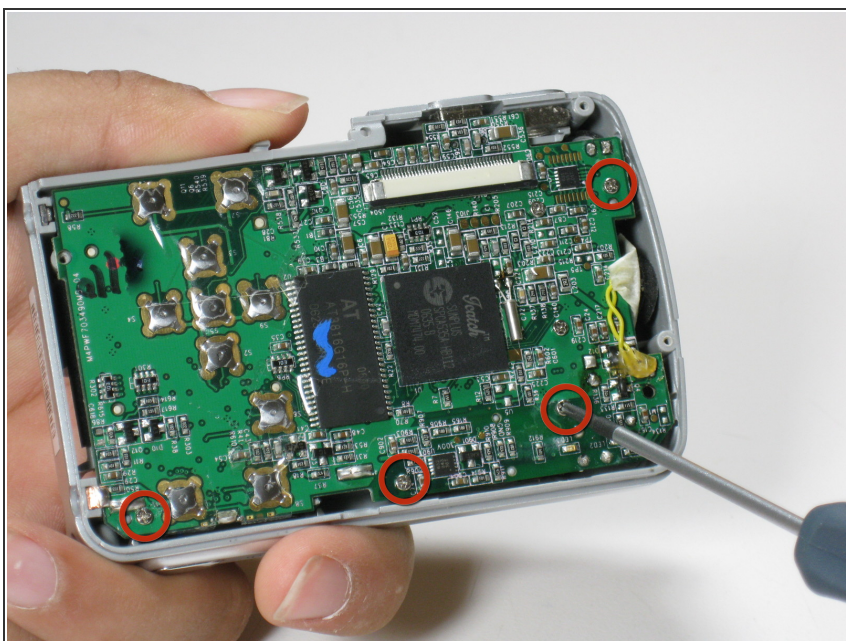

- Unscrew and remove the four (4mm) screws from the logic board.

 Step 11

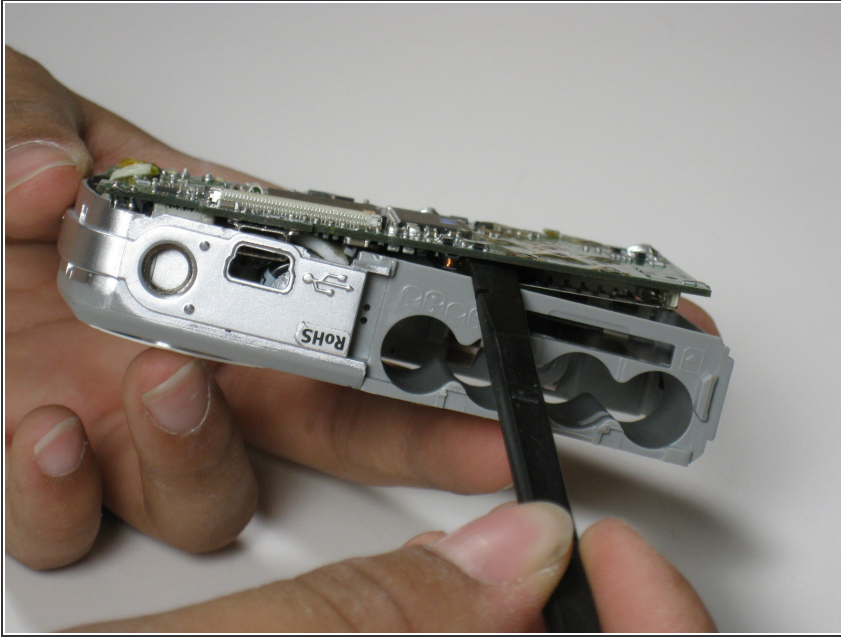

- Use a spudger to pry up all four sides of the logic board and slide it out of the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 06:37:21 AM.